


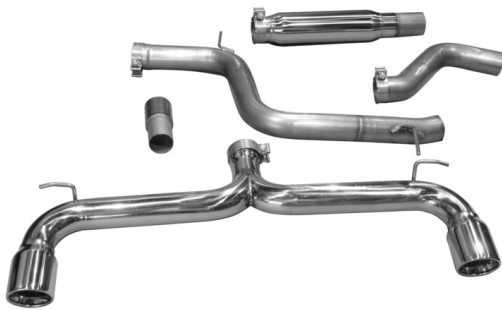

Part number SES3078
2015-2017 Volkswagen Mk7 GTI
2.0L turbo 4cyl. TSI

1- 5 piece cat back exhaust
4- 76mm band clamp (#4015)
2- M8 hex screw (#6017)
2- Small washer (#6011)



Congratulations! You have just purchased the best engineered, dyno-proven exhaust system available.

Please check the contents of this box immediately.

Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

*Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

Injen Technology 244 Pioneer Place Pomona, CA 91768 USA

Please check the contents of this box immediately.
Parts and accessories are available on line at "Injenonline.com"

NOTE: All Injen exhaust systems are engineered to comply with the 95dB noise limit law specified by the California Highway Patrol and the Society of Automotive Engineers - Except ones that are designated for "Off-Road Use only".

Every Injen exhaust system is individually designed for a specific application and complies with the requirements of Sections 27150, 27151 & 27200 of the California Vehicle Code and Title 13 of the California code of Regulations, Section 10361, which establishes a noise limit of 95dB for passenger cars.

The age of your exhaust system along with certain engine modifications, such as headers, intake, etc., may also affect its current noise level output.

Please check with your local and state law enforcement agencies for exact regulation requirements.

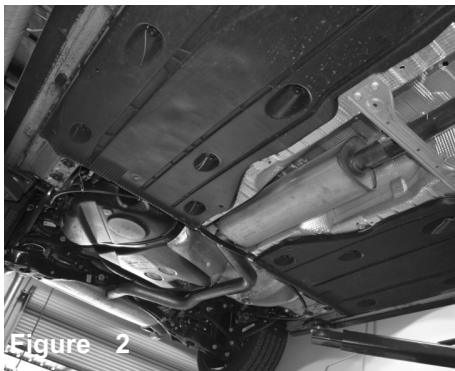


Figure 2
Secure the factory exhaust system.

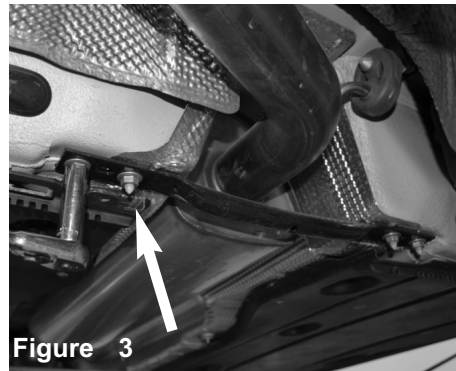


Figure 3
Loosen the 4 nuts holding in the body support strut brace.

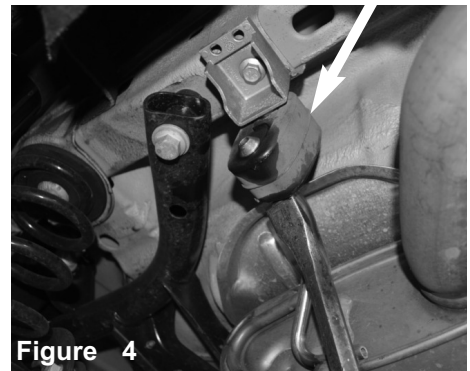


Figure 4
Pull back all the hangars from isolators. Lubricate for easier removal.

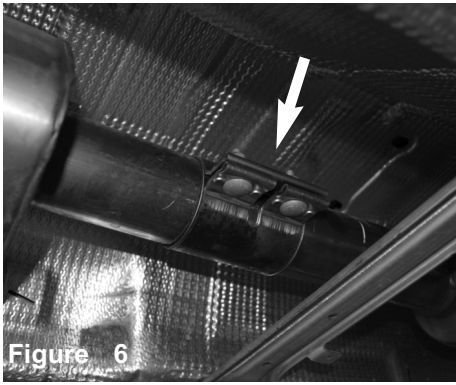


Figure 6

Loosen the clamp that attaches the exhaust to the factory downpipe.



Figure 7

Remove the complete exhaust system out of the vehicle.

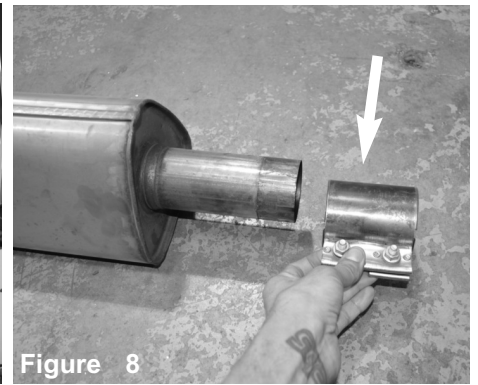


Figure 8

Loosen the clamp and remove. This will be reused on the new injen exhaust.

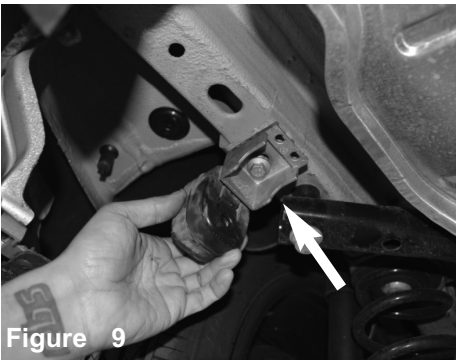


Figure 9

Rear exhaust hangers have the room for adjustment. Loosen bolts allowing the exhaust to have full adjustment. Use provided M8 screws and small washers.

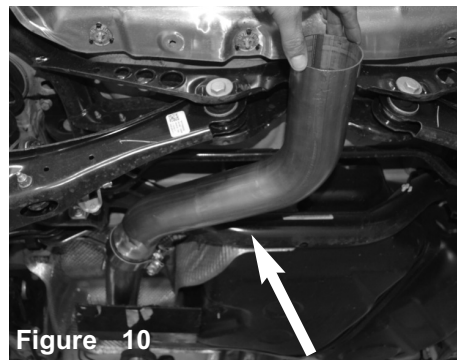


Figure 10

Install the exhaust. Install the front section 3" adaptor with provided band clamps. attach the mid section with resonator. Install under axle pipe with band clamps. **DO NOT TIGHTEN!**



Figure 11

Install rear section, install all hangers and secure to the isolators. **DO NOT TIGHTEN!**

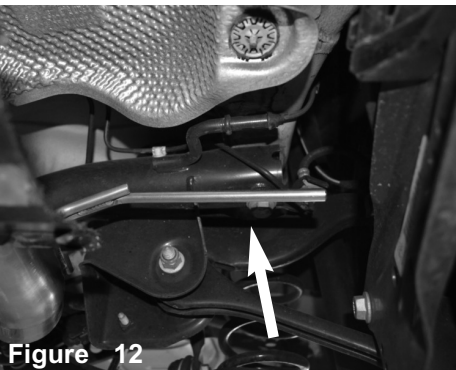


Figure 12

Later model Mk7 did not come with additional hanger support. Injen exhaust has hanger for 2015-2016 models. extra rubber isolator can be used and installed if desired.

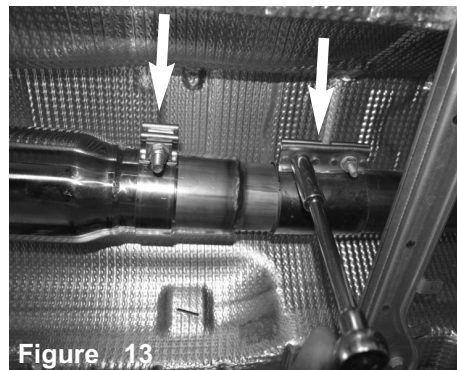


Figure 13

Adjust and snug fit all the band clamps. adjust for perfect fitment and clearance.

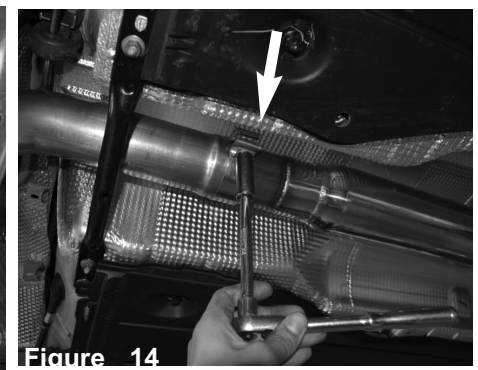


Figure 14

make sure clearance is between the support brace from step 3. Secure the band clamps.

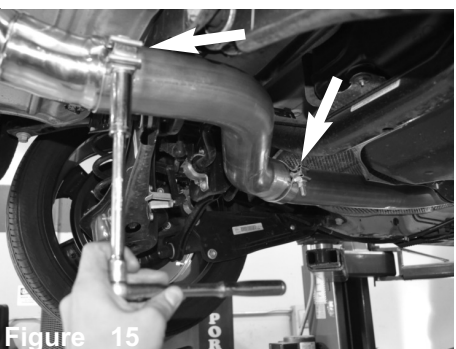


Figure 15

Now position for the best fit, This may require to loosen and retighten other band clamps. Tighten all using 15mm socket and wrench. Secure and tighten all band clamps. Push exhaust forward for exhaust to fit properly.



Figure 17

Your installation is now complete. Check for clearance and position for best possible fit. Re-install the mid-frame support brace. Make sure there is clearance and the exhaust is not touching.