



**Part number SES1901
2011-14 Nissan
JUKE / JUKE NISMO EDITION
(EXCLUDES 2015-16)
1.6L Turbo 4 cyl.**

- 1- 1 piece turbo auxillary tube**
- 1- 2" straight hose (#3072)**
- 1- 2-3/4" straight hose (#3043)**
- 2- #40 clamps (#4003)**
- 2- #28 clamps (#4021)**
- 1- 2 page instruction**

Congratulations! You have just purchased the best engineered, dyno-proven exhaust system available.

Please check the contents of this box immediately.

Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

*Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

Injen Technology 244 Pioneer Place Pomona, CA 91768 USA

**Please check the contents of this box immediately.
Parts and accessories are available on line at "Injenonline.com"**



Figure 1

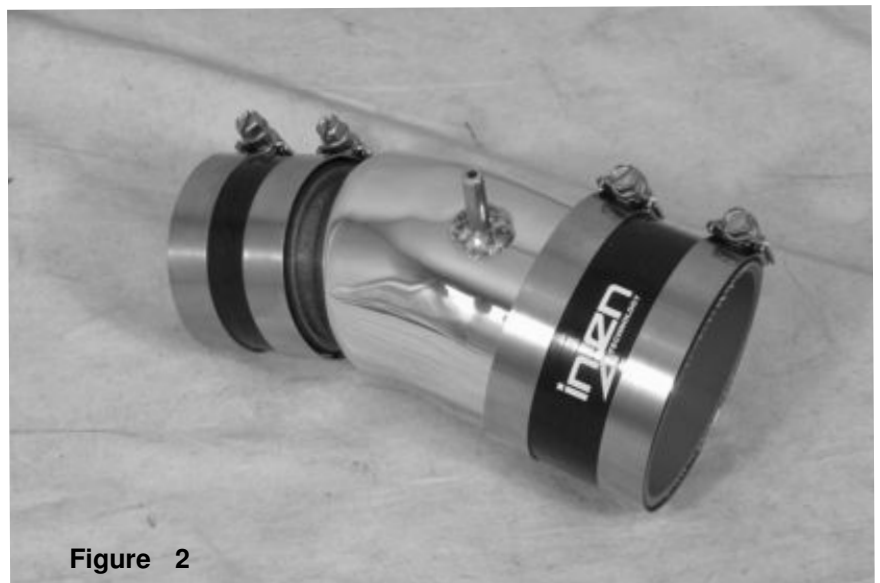


Figure 2

Turbo auxillary intake pipe.

Hardware contents in kit:



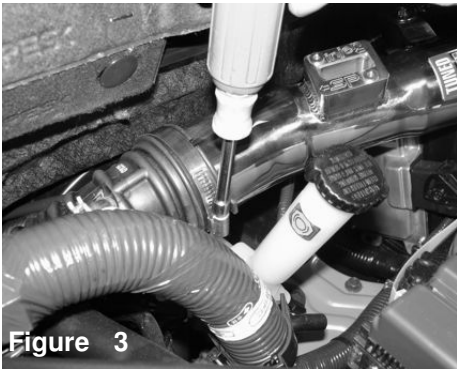


Figure 3
Loosen the factory turbo coupler and remove from vehicle. Pull out the vacuum line from coupler.

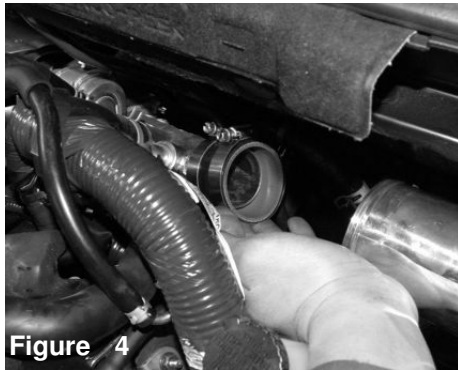


Figure 4
Install the 2" straight hose to the turbo housing and secure using provided clamps.



Figure 5
Install the 2-3/4" straight hose with clamps provided to the intake tube. Do not tighten.

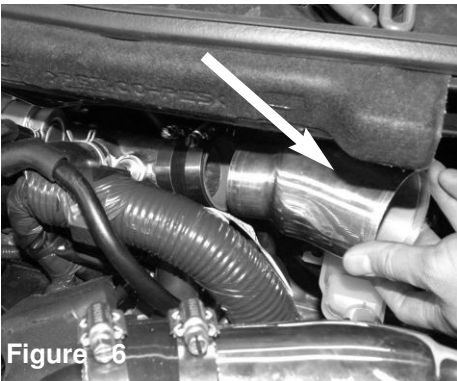


Figure 6
Install the new Turbo auxiliary tube and position to the hose.

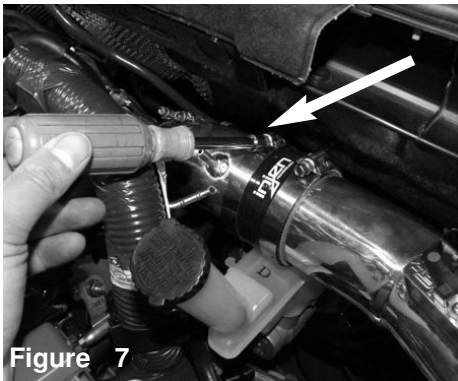


Figure 7
Position for the best fit and tighten all the clamps using 8mm nut driver.



Figure 8
With Pliers loosen the clamp on the vacuum fitting.



Figure 9
Carefully pull back the clamp, remove the fitting.



Figure 10
Attach the vacuum line to the fitting on the turbo auxiliary line.

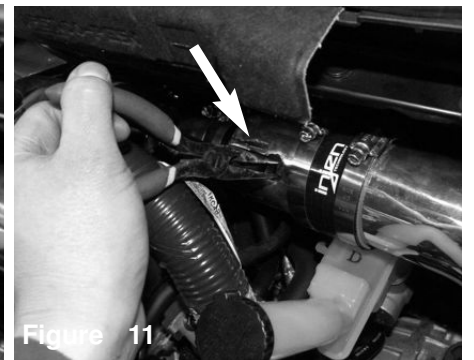


Figure 11
Secure the vacuum line using the stock clamp.

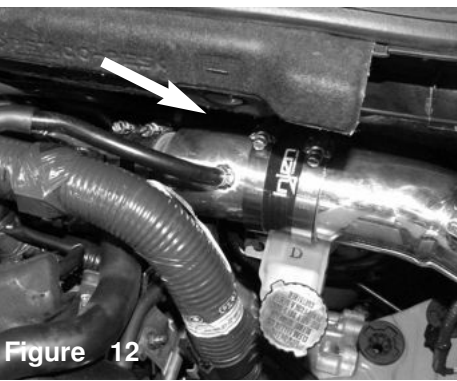


Figure 12
Adjust if necessary.



Figure 13
Your auxiliary tube install is now complete. Thank you for choosing Injen Technology.