



EXPLODED VIEW

Vehicle Application:			
Make: Dodge/Chrysler			
Model: Charger/Challenger			
Year: 2015-2016			
Engine: 6.2L V8 HELLCAT			



Item	QTY.	P/N	Discription
A	1	#15135	Air Box
B	1	#15138	Tube
C	1	#1107BB	Dry filter (Blue Media) ^{EVO5102}
C	1	#1107BR	Oiled Filter (Red Media) ^{EVO5102C}
D	1	#3218	Step hose
E	1	#4006	#64 clamp
F	1	#4014	#72 clamp
G	1	#6121	Temp sensor grommet
H	1	#15141	black/red injen badge Large
I	2	#6109	retaining clips
J	1	#6113	Bulb rubber trim @13.5"L
K	1	#6113	Bulb rubber trim @4" L
L	2	#6047	M4 screws

WARNING: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE SYSTEM, ENGINE AND COMPONENTS!!!
***Do not attempt to install the intake system while the engine is hot.**
 Severe burn could result from touching hot engine components!

- TOOLS REQUIRED**
- 10mm Ratchet & Socket
 - 8mm nut drive
 - Allen key
 - Needle nose
 - Phillips Screwdriver

Report any defective or missing parts to the authorized Injen dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation, please contact your Injen Technology dealer. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

A Limited Lifetime Warranty to the original purchaser against defects in material and workmanship on all Injen intake systems excluding the filter element. Any and all warranty coverage is limited to the repair or replacement of the defective part only, at Injen Technology's discretion. The warranty does not cover incidental or consequential damages, nor does it cover the cost of installation or removal of the defective part or its replacement. Proof of purchase is required.

Instruction Manual P/N:EVO5102

Injen intake systems are street legal in most states unless the state is adopting to California Emissions standards. States that have adopted California emission standards include: Arizona, California, Connecticut, District of Columbia, Maine, Maryland, Massachusetts, New Jersey, New Mexico, New York, Oregon, Pennsylvania, Rhode Island, Vermont, and Washington. These states will require an California Air Resource Board Executive Order Number (CARB E.O.) for the legal use of an Injen intake system in your vehicle for use on public roads or highways. These vehicle will be considered "Legal in California only for racing vehicles competition use only, which may never be used upon a public street or highway. **Please keep your factory air box assembly for any future use.**

NOTE: Verify your filter before any cleaning maintenance!

Blue media filter: Dry Air Filter, no oil required.

(SuperNano Web Dry filters require no oil, these can be cleaned using a vacuum or light compressed air. Please do not clean using water or injen restore kit.)

Red media filter: Factory Oiled Air Filter.

(Oiled cotton gauze filters require oil, please use injen restore kit. This filter can use water or cleaning solution for maintenance.)

Please visit injen.com for filter cleaning instructions.




NOTE: DISCONNECT BATTERY BEFORE INSTALLATION!!!

Instruction Manual P/N:EVO5102



1. Stock intake system shown.

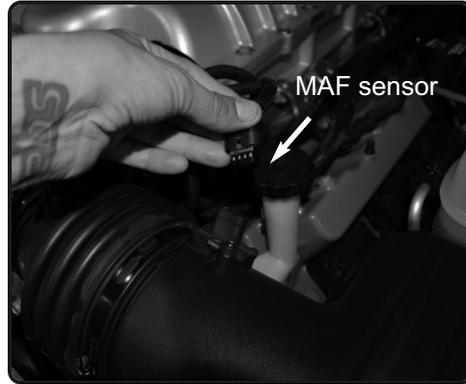


2. Disconnect the MAF sensor harness.



3. Pull back crank case line from intake tube fitting.



4. Loosen the clamp on throttle body using 8mm nut driver.

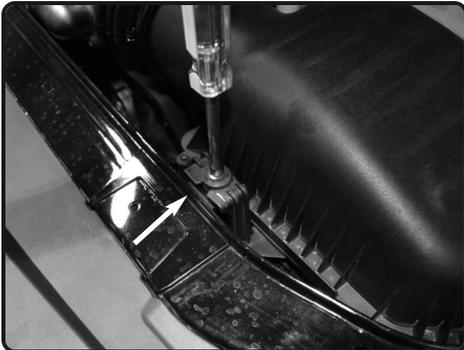

5. Loosen the screw holding in the airbox using 8mm nut driver. Save for later install.



6. Carefully lift up and remove the stock air box assembly.



7. Install the provided bulb trims to the bottom of the airbox.




8. Insert twist lock filter to the air box.




9. Once seated, rotate in either direction 1/4 turn till filter locks.



10. Install the air box assembly into the vehicle. Secure using OEM screw. Make sure the nipple fitting on back side of injen airbox is seated in the OEM grommet on fender well.

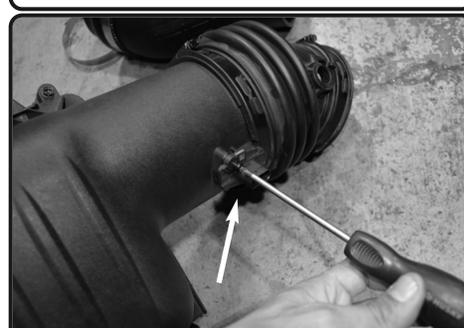

11. Loosen and remove the MAF sensor out of the airbox.

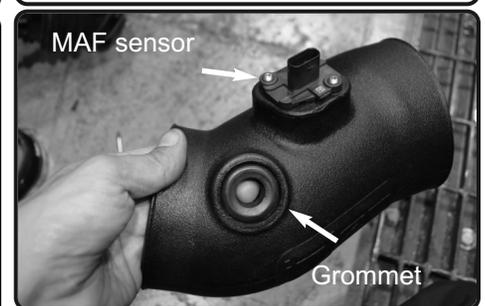

12. Install the provided crankcase grommet to the hole cutout on the tube.



13. Install the step hump hose to the throttle body. Install the intake tube and position for fit.



14. Adjust for fitment and tighten all clamps using 8mm nut driver.



15. Now install the crankcase line into the grommet.



16. Secure and make sure the unit is pushed closes to the throttle body. This will clear the hood and not hit.



17. Connect the MAF sensor harness.



18. Verify and check all components are tighten and secured.

Instruction Manual



Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**

Test Drive:

1. With the transmission in neutral or park and the parking brake engaged, start the engine. Listen for air leaks or odd noises. If air leaks are detected, secure hoses and connections. For any odd noises, inspect entire system for cause and adjust intake as needed. The Injen intake will function identically to the factory system but will be louder and more powerful.
2. Perform a road test. Listen for odd noises or rattles and fix as necessary.
3. If there are no issues, continue to enjoy your added performance from the Injen performance Intake kit.
4. Injen Technology recommends you periodically check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.

1. Upon completion of the installation, reconnect the negative battery terminal before you start the engine.
 2. Align the entire intake system for the best possible fit. Once the intake has been properly fitted continue to tighten all nuts, bolts and clamps.
 3. Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.
 4. Start the engine and listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that maybe causing leaks or rattles and correct the problem.
 5. Check the filter for excessive dirt build up. Clean or replace the filter with an original Injen filter (can be bought on-line at "injenonline.com").
- Congratulations! You have just completed the installation of the best intake system sold on the market. Enjoy the added power and performance of your new intake system.