



“The World’s First Tuned air Intake System!”
Factory safe air/fuel ratio’s for Optimum performance
Injens tuning process covered by three U.S. Patents

Part number PF5013
2012-21 Jeep Grand Cherokee
2018-2023 Dodge Durango
SRT-8
V8 6.4L

- 1- 1 piece MR Tech Intake System
- 1- 4” Web/nano fiber dry Air filter (X-1026)
- 1- Heat Shield (X-11090)**
- 1- 3 1/2”straight hose (#3037)
- 2- Power-bands (.056) (#4005)
- 1- Male/female M6 vibra mount (#6028)
- 1- Male/male M6 vibra mount (#6020)
- 2- fender washer (#6010)
- 3- M6 nuts (#6002)
- 1- Temp sensor Grommet (#8002)
- 1- Rubber trim @ 25” Long (#6058)
- 1- Rubber trim @ 11.5” Long (#6058)

4 page instruction

Note: The C.A.R.B. Exempt sticker must be attached under the hood in a manner such that it is easily viewed by an emissions inspector.

Congratulations! You have just purchased the best engineered, dyno-proven cold air intake system available.

Please check the contents of this box immediately.

Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from.

Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

*Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

Injen Technology 244 Pioneer Place Pomona, CA 91768 USA

Please check the contents of this box immediately.

Note: This intake system was Dyno-tested with an Injen filter and Injen parts. The use of any other filter or part will void the warranty and CARB exemption number.



- Tools required:**
- 1- 8mm nut driver
 - 1- 10mm socket
 - 1- ratchet

Warning: Manufactures attempting to duplicate Injen’s patented process will now face legal action.

MR Technology Step down process:

- 1- Calibration Method for Air Intake Tracts for Internal Combustion Engines. Covered under Patent# 7,359,795
- 2- Calibration Device for Air Intake Tracts for Internal Combustion Engines. Published and patent pending
- 3- Calibration Method and Device for Air Intake Tracts having Air Fusion Inserts. Published and patent pending

Note: Injen strongly recommends that this system be installed by a professional mechanic.



Figure 1



Figure 2
Complete stock air intake cleaner and air intake duct.



Figure 3
Disconnect the temperature sensor.



Figure 4
Loosen the clamp on the throttle body using 8mm nut driver.

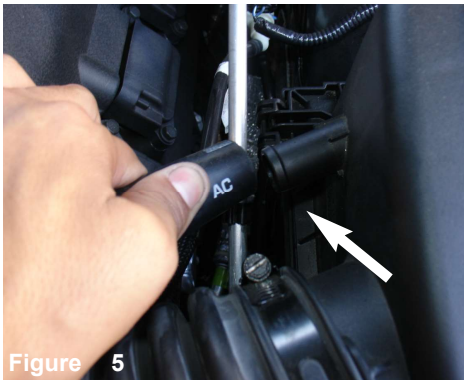


Figure 5
Pull back the crank case line from the air box fitting.



Figure 6
Remove the complete air box assembly out of the vehicle.



Figure 7
Remove the plastic air box splash guard.



Figure 8
Locate the M6 threaded fitting on the strut tower and secure the male/female vibra mount.

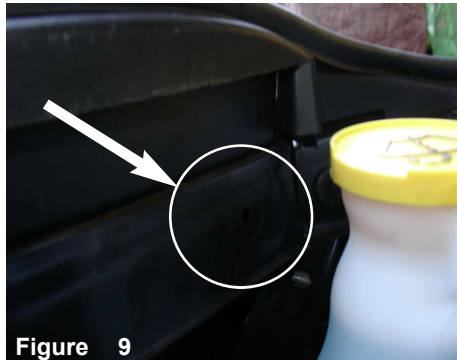


Figure 9
Locate the hole that is on the radiator support behind the washer reservoir filler. Some model may have a plastic push in rivet that will have to be removed to access this hole.

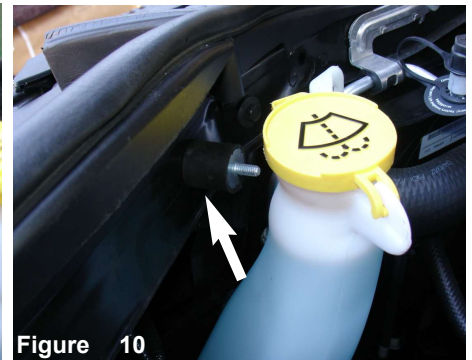


Figure 10
Install the male/male vibra-mount secure the back of the vibra-mount using provided m6 nut. You will have place the m6 nut on the back side of the frame in order to do this.

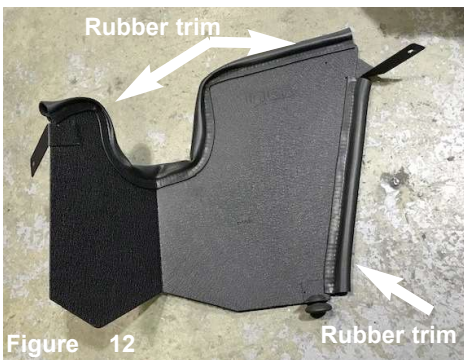


Figure 12
Install the rubber trim to the top of the heat shield. Install the smaller rubber trim to side of the heat shield.



Figure 13
Remove one of the OEM rubber grommets from the stock air box and install into the tab on bottom of heat shield.



Figure 14
Install the heat shield assembly into the vehicle and position the heat shield brackets to the vibra-mounts. Then place the bracket with the OEM grommet onto the air box mounting tab on the shock tower

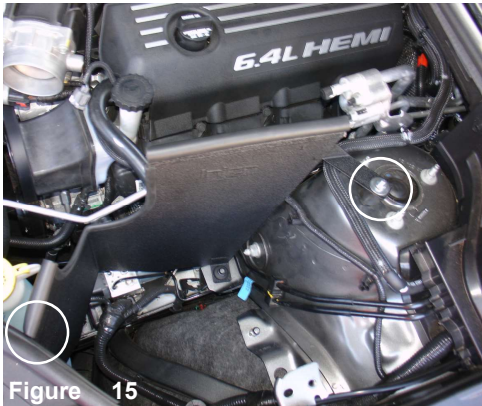


Figure 15

Secure the heat shield using provided M6 nuts and fender washers.

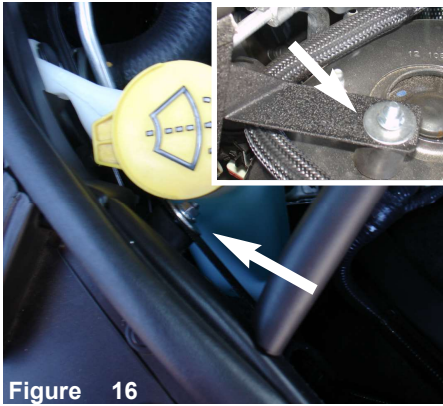


Figure 16

Secure and tighten the tabs using 10mm socket or wrench.

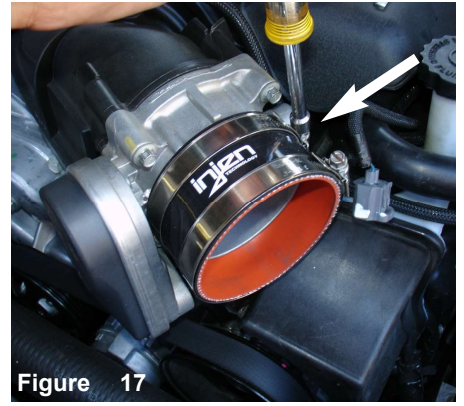


Figure 17

Install the straight hose with clamps to the throttle body. Tighten the clamp on throttle body using 8mm nut driver.

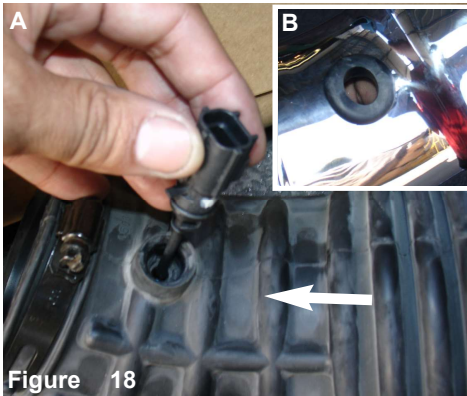


Figure 18

A) Remove the temp sensor from the stock intake tube. B) Install the temp sensor to the hole on intake tube.

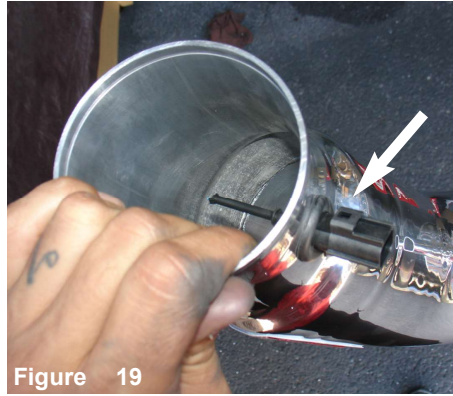


Figure 19

Install the temperature sensor into the intake tube and secure.



Figure 20

Install the intake tube into vehicle and position. Then reconnect the air temp sensor harness.

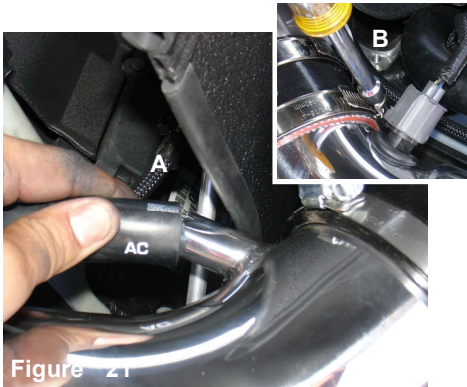


Figure 21

A) Connect the crank case line to the fitting on intake tube. B) Tighten the clamp on throttle body.



Figure 22

Install the air filter and tighten using 8mm nut driver. Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**

1. Upon completion of the installation, reconnect the negative battery terminal before you start the engine.
2. Align the entire intake system for the best possible fit. Once the intake has been properly fitted continue to tighten all nuts, bolts and clamps.
3. **Periodically**, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.
4. Start the engine and listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that maybe causing leaks or rattles and correct the problem.
5. Check the filter for excessive dirt build up. Clean or replace the filter with an original Injen filter (can be bought on-line at "injenonline.com"). Congratulations! You have just completed the installation of the best intake system sold on the market. Enjoy the added power and performance of your new intake system.