




Vehicle Application:
 Make: **Ford**
 Model: **Mustang EcoBoost**
 Year: **2015-2023**
 Engine: **2.3L 4-cyl. Turbo**

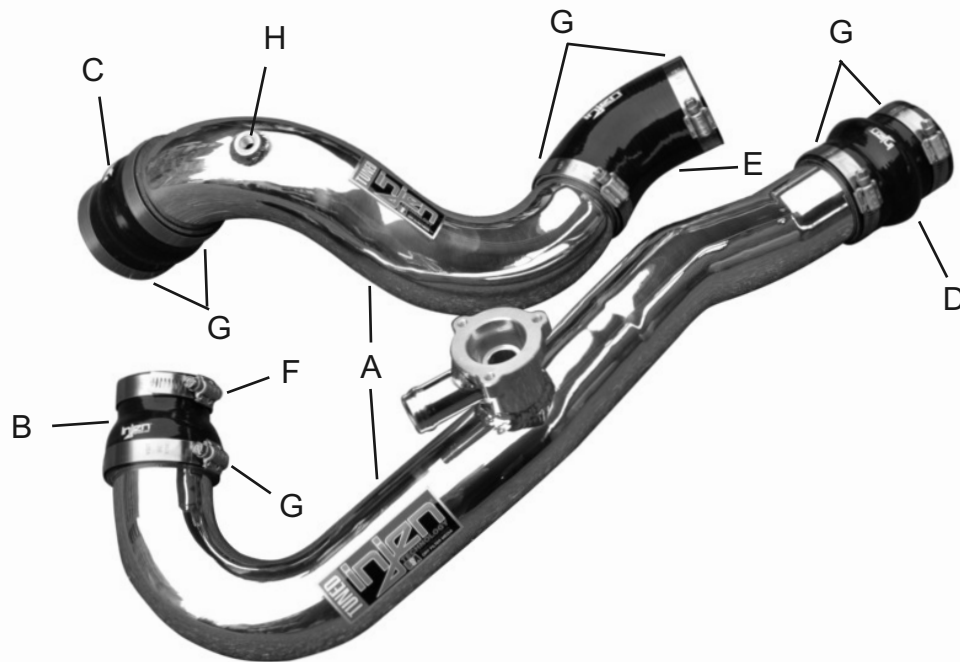

Item	QTY.	P/N	Discription
A	1	W-SES9200ICP	2 piece intercooler pipes
B	1	X-3222	2.0"X2.5" Step hose
C	1	X-3193	2.75" hump hose
D	1	X-3221	2.50" Offset 3.50" long hump hose
E	1	X-3154	2.50" 60 degree elbow hose
F	1	X-4009	#36 clamps
G	7	X-4003	#40 clamps
H	1	X-8054	1/8" NPT Plug

TOOLS REQUIRED

- Pliers
- 7mm nut driver
- 8mm nut drive
- Allen key

WARNING: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE CHARGE PIPE KIT, ENGINE AND COMPONENTS!!!

***Do not attempt to install the charge pipe kit while the engine is hot.**


Severe burn could result from touching hot engine components!

Report any defective or missing parts to the authorized Injen dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation, please contact your Injen Technology dealer. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

A Limited Lifetime Warranty to the original purchaser against defects in material and workmanship on all Injen charge pipe kits. Any and all warranty coverage is limited to the repair or replacement of the defective part only, at Injen Technology's discretion. The warranty does not cover incidental or consequential damages, nor does it cover the cost of installation or removal of the defective part or its replacement. Proof of purchase is required.

Instruction Manual P/N:SES9200ICP

NOTE: This charge pipe kit was designed to work with the OEM Intercooler and Injen Technology front Mount Intercooler kit. This Charge pipe kit may not work with all aftermarket intercooler kits.

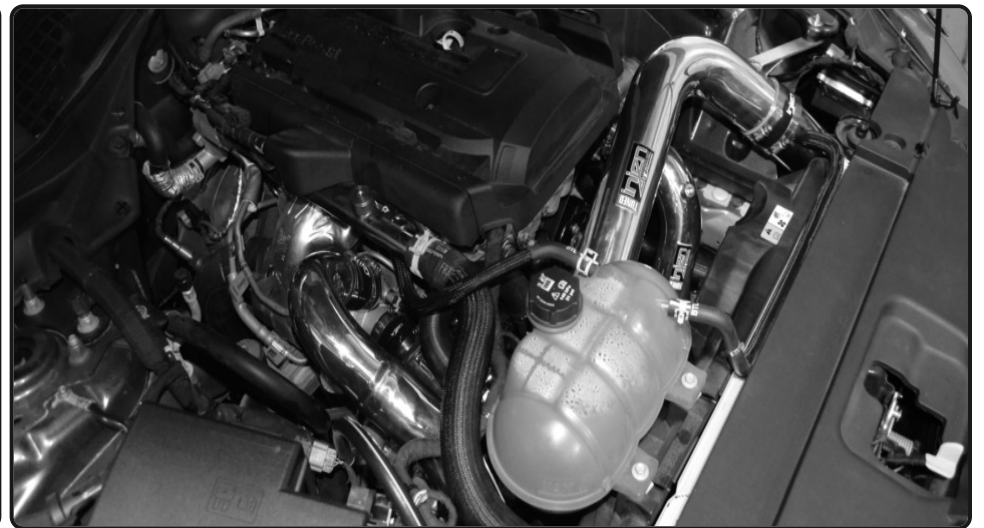


NOTE: DISCONNECT BATTERY BEFORE INSTALLATION!!!

Instruction Manual P/N:SES9200ICP



1. Remove the factory intake system or injen intake system from vehicle for installation of the new intercooler pipes. (See injen instruction sheet PF9091.)

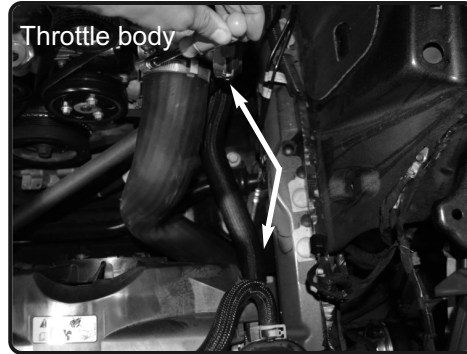


2. Loosen the clamp on the throttle body using 7mm nut driver. Loosen the clamp on the intercooler side also.



7. Carefully pull out the OEM rubber cold side intercooler hose out of vehicle.



3. Install the provided 2-3/4" hump hose to the throttle body using provided clamps, tighten the clamp on throttle body only.

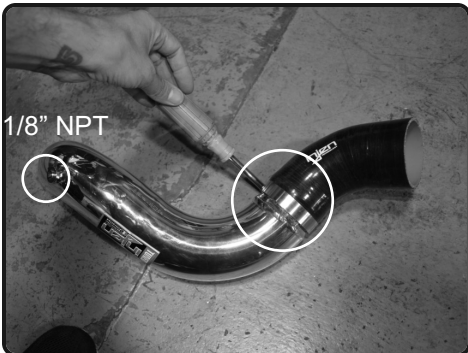


4. Secure the threaded fitting on intercooler tube if not using for auxiliary boost/injection line with provided 1/8" NPT plug. Secure and tighten. Install the provided 2-1/2" elbow hose to the intake tube with clamps provided.



5. With soap water lubrication on the inside of the elbow hose, install the intercooler assembly into vehicle with clamp. This will allow for the elbow hose to slide on easier to intercooler. Do not tighten.



6. Now position the intercooler pipe into the hump hose on throttle body and secure. Adjust for proper fitment.

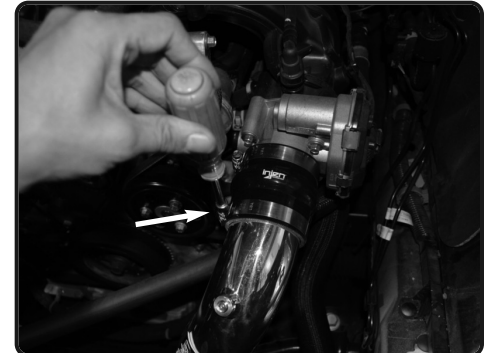

7. Tighten all clamps using 8mm nut driver.




8. Loosen the clamp on the turbo for the hot side of the intercooler pipe using 7mm nut driver or ratchet. Loosen the clamp on the intercooler side also.



9. Disconnect the diverter valve harness. Pull line harness away from hot intercooler pipe.




10. Pull back the intercooler pipe from turbo.

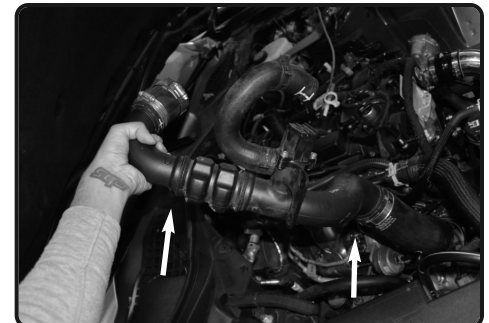

11. Now carefully lift up and remove the intercooler pipe out of vehicle.


Instruction Manual P/N:SES9200ICP

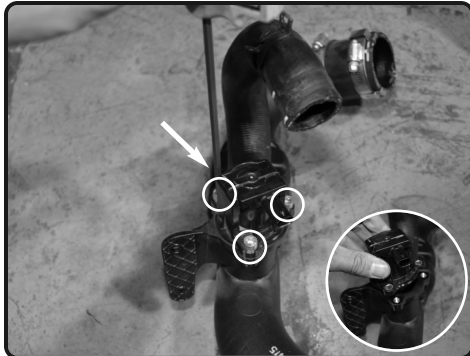


12. Loosen the 3 screws holding in the diverter valve using allen key. Carefully remove. Position new injen intercooler next to pipe for correct position.




13. Secure the diverter valve to the injen intercooler pipe using allen key. Secure using original screws.

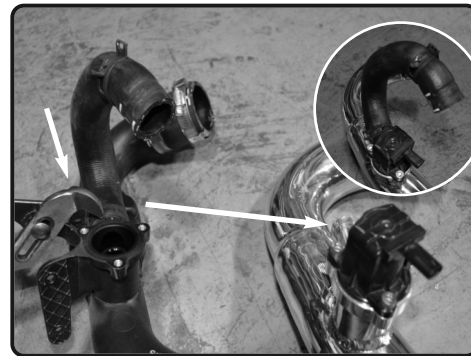

14. With pliers loosen, loosen clamp and pull back line. Carefully remove and transfer to the new injen intercooler fitting.

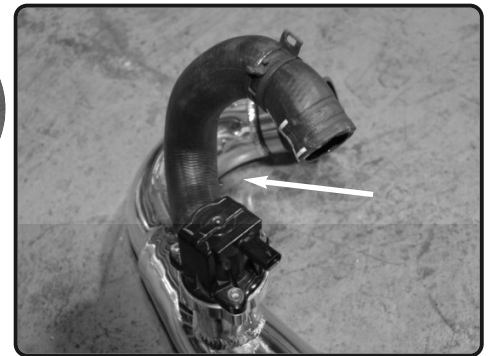

15. Secure the diverter line to the intercooler fitting.

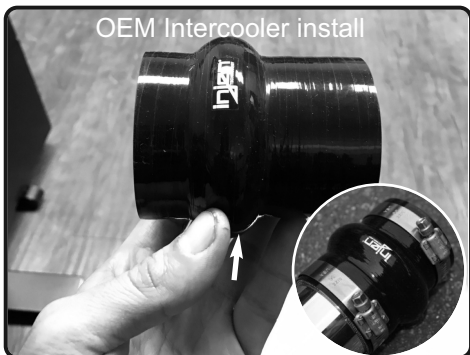

16. The 2.5" x 3.5"L hump hose seen above is for the installation with OEM intercooler only! **DO NOT CUT!**




17. With injen Intercooler only, locate inside the hump hose for the cut indicator line. Cut back the intercooler hose at this 1" line. This will allow for the hump hose to be 2.5" x 2.5"L. **Cut only with injen intercooler only!**



18. Install the step hose with clamps provided to the turbo side of the intercooler pipe.



19. Install the hot side injen intercooler pipe into the vehicle. Position

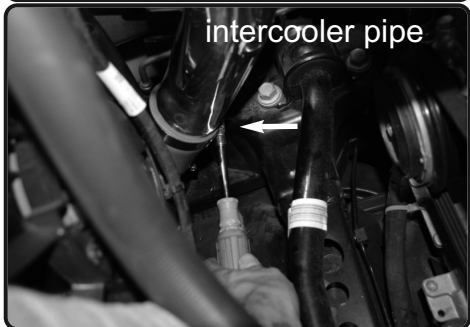

20. With soap water lubrication on the inside of the hump hose. This will allow for the elbow hose to slide on easier to intercooler. Tighten clamp using 8mm nut driver.



21. Secure the turbo side of the coupler and tighten using 8mm nut driver.



22. Re-connect the diverter valve harness.



23. Re-install the intake system or stock air box. Make sure to connect the crankcase line and diverter valve return line. PF9091P intake system shown above.



Congratulations! You have just completed the installation of this intercooler pipe system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**

Test Drive:

1. With the transmission in neutral or park and the parking brake engaged, start the engine. Listen for air leaks or odd noises. If air leaks are detected, secure hoses and connections. For any odd noises, inspect entire system for cause and adjust intake as needed. The Injen intake will function identically to the factory system but will be louder and more powerful.
2. Perform a road test. Listen for odd noises or rattles and fix as necessary.
3. If there are no issues, continue to enjoy your added performance from the Injen performance Intake kit.
4. Injen Technology recommends you periodically check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.

1. Upon completion of the installation, reconnect the negative battery terminal before you start the engine.
2. Align the entire intake system for the best possible fit. Once the intake has been properly fitted continue to tighten all nuts, bolts and clamps.
3. Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.
4. Start the engine and listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that maybe causing leaks or rattles and correct the problem.
5. Check the filter for excessive dirt build up. Clean or replace the filter with an original Injen filter (can be bought on-line at "injenonline.com"). Congratulations! You have just completed the installation of the best intake system sold on the market. Enjoy the added power and performance of your new intake system.